


Adjustable Core Label Rewinder

User's Guide

Thank you for purchasing adjustable core rewriter! As the company's products is in improving, the product you purchased may be slightly different from the instructions in the manual.

Installation Notes

■ Parts

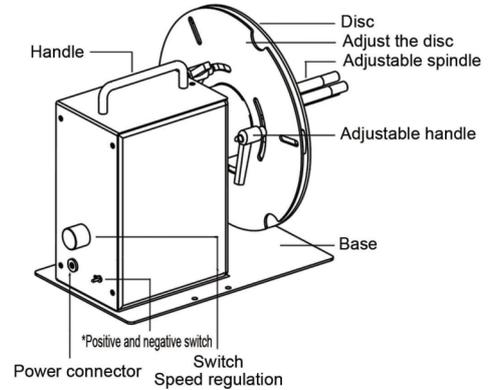

Please read this manual carefully before using


1

* Note: Both positive and negative switch toggle the left and right direction.


2

■ Installation of stop bar and use (optional)

■ Handle adjustment

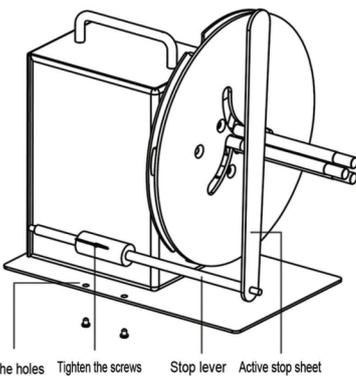


- ◆ Hold the stop lever against the base plate
- ◆ Loosen the fastening screw to adjust the width
- ◆ Rewinding the moving blanks pushed to the adjustable mandrel

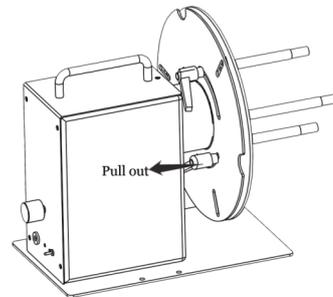

Handle too loose or too tight

- ◆ Pull the handle in the direction of the arrow
- ◆ Rotate several cards clockwise or counterclockwise
- ◆ Adjust to the appropriate position to release the handle

■ Core size adjustment and paper tube mounting and unloading

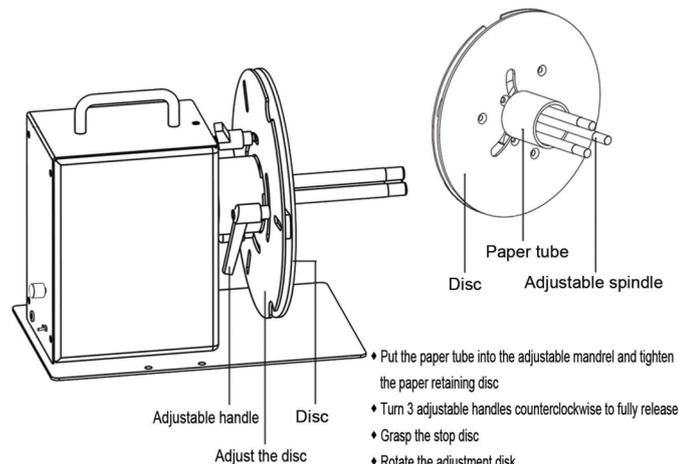


- ◆ Put the paper tube into the adjustable mandrel and tighten the paper retaining disc
- ◆ Turn 3 adjustable handles counterclockwise to fully release
- ◆ Grasp the stop disc
- ◆ Rotate the adjustment disk
- ◆ Hold the paper tube completely and lock the adjustable handle
- ◆ Remove one or more handles to remove the paper cylinder

3

4

■ No paper cartridge dis-assembly

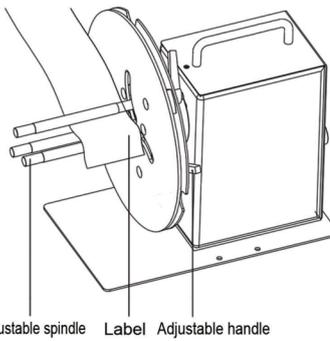


Loading :

- ◆ Adjust the adjustable spindle to the size you need
- ◆ Place the label in the middle of the three axes
- ◆ Turn on the rewinder

Unloading:

- ◆ Release one or more adjustable handles
- ◆ Remove the label

■ Label rollback

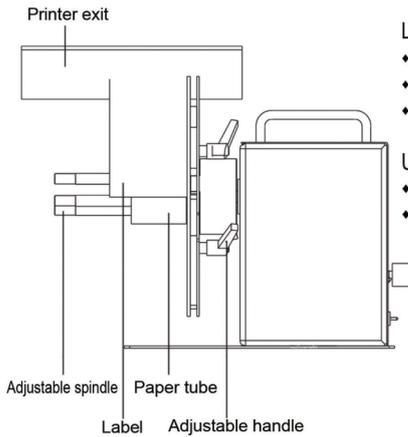

Loading :

- ◆ Put the paper tube into the three-axis stop block
- ◆ Hold up the paper cylinder lock 3 adjustable handle
- ◆ Paste the label on the paper roll to start rewinding

Unloading:

- ◆ Release one or more adjustable handles
- ◆ Remove the label

5

■ Notice:

- ◆ Before using, please check whether the adapter voltage is the same as the voltage marked on this machine.
- ◆ Do not plug the power plug by wet hands to avoid the risk of electric shock.
- ◆ When the product is idling, do not put fingers, sharp objects, etc. into the bezel assembly..
- ◆ Avoid the production in this environment to use ,such as alkali oil, pesticides ,other water near the object an high humidity environment. Do not put the product in a sloping environment, to avoid tipping over..
- ◆ When the machine is finish work, turn off the power and unplug the power adapter plug, in order to avoid circuit failure occurs.
- ◆ Please check the power adapter whether is damaged or not, if damaged,in order to avoid danger, or cord breakage, it must be repaired by the manufacturer, its service department, or similar department Personnel repaired shop.

■ Maintenance

- ◆ Please turn off the power before cleaning the product.
- ◆ Do not flush the body directly by water.
- ◆ Do not use any abrasive tools and solvents to clean which will damage the surface ,please clean the products by detergent and wipe it by a dry cloth.
- ◆ Do not open the product to inspection and clean.

7

■ Product parameters

Product		UR10	UR12
Speed	Millimeter/Sec	400	400
Disk diameter	Millimeter	185	220
Core range	Millimeter	25-76	25-101
Label width	Millimeter	100	120
Rewinding method	Automatic synchronization	Positive and negative	Pulling force Positive and negative
Power Specifications	Power Adapter	100-240V AC	100-240V AC
Package size (MM)	L	375	415
	W	265	325
	H	290	320
Product weight	Kg	4.2	5.5
Working environment	No condensation	5 ~ 40°C	5 ~ 40°C

■ List

- ◆ Adjustable core rewinder host 1
- ◆ Power Adapter 1
- ◆ Instruction Manual 1

6